



# International Truck Seat by

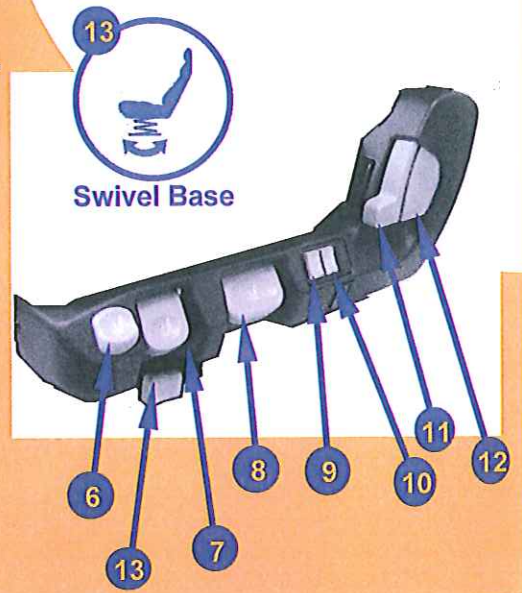

Adjustable Armrests	Seat Tilt Adjustment	Seat Cushion Length Adjustment	Fore/Aft Adjustment
Fore/Aft lockable Isolator	Air Dump	Adjustable Shock Absorber	Air Height Adjustment (HA)
Lower Air Lumbar	Upper Air Lumbar	Shoulder Adjustment	Backrest (Full Recline)

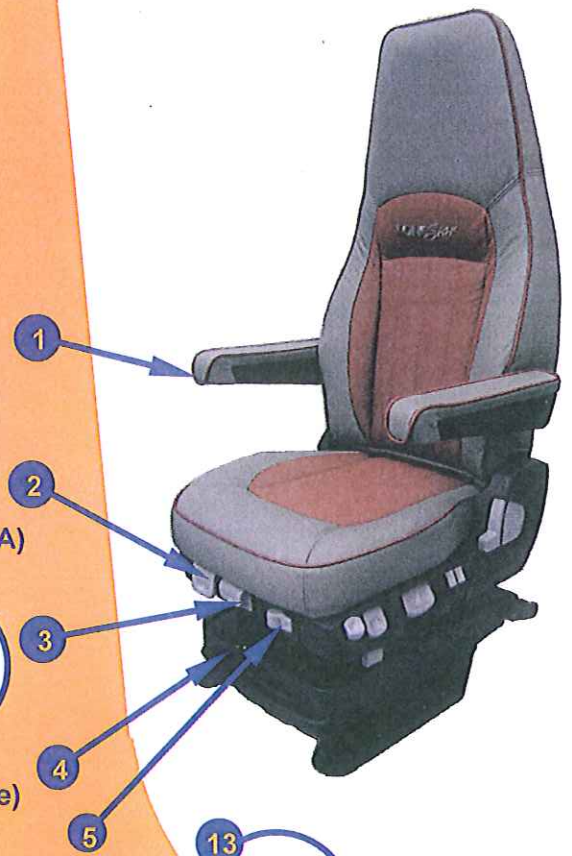

## ADVANTAGES OF NEW FUNCTIONS

- 1 adjustability allows infinite positions of armrest
- 2 put the driver in relax or driving position → optimal circulation
- 3 optimal leg support for different driver height → optimal circulation
- 5 allow to block for special driving conditions
- 6 easy in/out: returns to last position of HA while active
- 7 allow to adjust the suspension performance to the road
- 8 height adjustment with memory function
- 11 comfortable & safe rides because of optimal body support

## ⚠ WARNING

- Read and understand operator's instructions before using the seat.
- Do not use damaged or faulty seat.
- Do not adjust seat while driving.
- Always use seat belts.
- With seat properly adjusted and at maximum suspension height, you must have at least 2 in. (50.8 mm) of head room.
- If you operate the seat with a air tank read the instructions on page two.



© ISRINGHAUSEN 2008

1458 South 35th Street  
Galesburg, MI 49053

Toll free (US): 800-468-4774  
Fax: 269-484-5344

ISRI P/N 7018088-01, Rel.: Jan. 2008