




6800/348 Premium Seat

Operator's Instructions

The Premium Seat is an adjustable air suspension seat, designed to provide a high level of comfort during its many hours of service.

To enjoy the greatest degree of comfort and safety

- Read and understand these instructions and become familiar with all the controls and their functions.
- Perform the recommended maintenance
- Order and use only the correct replacement parts

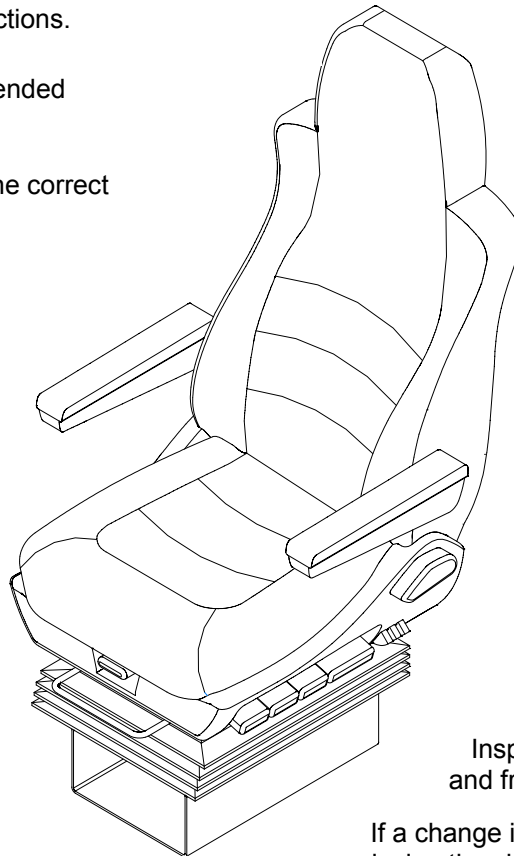

Operator Inspection and Preventative Maintenance

Daily

Inspect seat belts; they must be in place and work properly. Replace worn or faulty seat belts.

Inspect all controls; they must be in place and function properly.

Inspect moving components; they must move freely. However, excessive free play indicates worn components. Repair or replace components as needed.

Weekly

Inspect all fasteners; they must be in place and tight. Be sure all mounting fasteners are torqued properly.

Inspect upholstery for cracks, cuts, tears, or breaks; replace if needed. Clean upholstery when needed.

Inspect suspension boot; it must be in place and free from cuts and cracks.

If a change in suspension performance is noticed replacing the shock absorber may be required.



WARNING


Failure to follow these procedures could cause serious or fatal injury to yourself and others:

- Read and understand operator's instructions before using seat.
- Do not use damaged or faulty seat.
- Do not adjust seat while driving.
- Always use seat belts.
- With seat properly adjusted and at maximum suspension height, you must have at least 50.8 mm (2.00 in.) of head room.




6800/348 Premium Seat Operator's Instructions


Controls

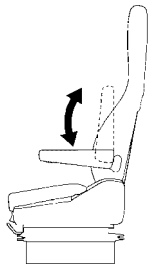


Adjustable
Armrest

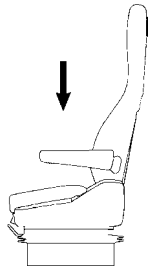

Quick Air
Release


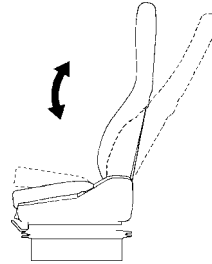


Seat Tilt
Adjustment

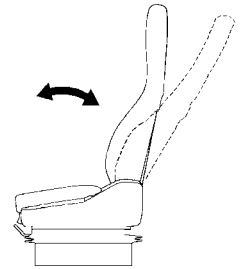


Backrest
Adjustment


Adjust the seat so you can operate all vehicle controls in a comfortable manner. After adjusting seat - fasten seat belt.

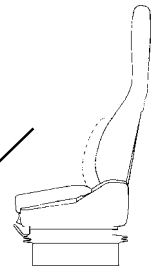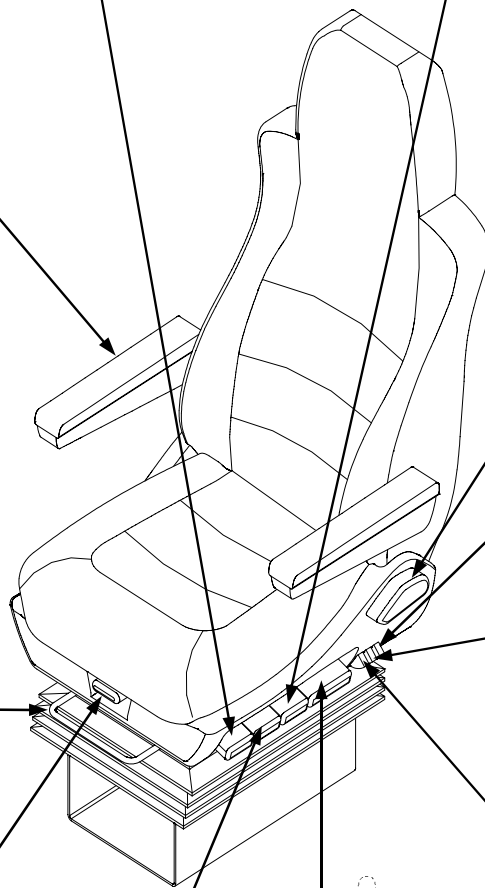


Side Support

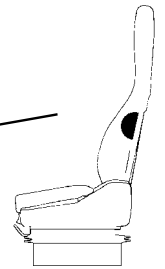


Upper Lumbar
Support

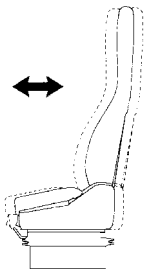


Horizontal Adj.

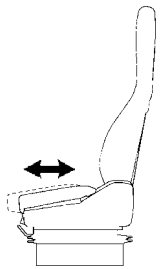

Cushion
Length Adj.

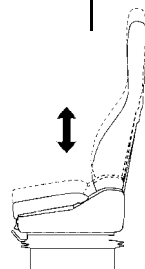

Height Adj.

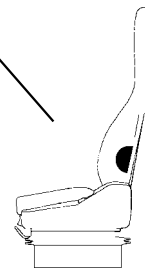

Lower Lumbar
Support

Vertical Shock
Absorber